


# DEDICATED TIN ROOF ENTRY

Residential & Commercial applications

## INSTALL STEPS

### 1. DRILL & CLEAN

Drill with hole saw and clean area

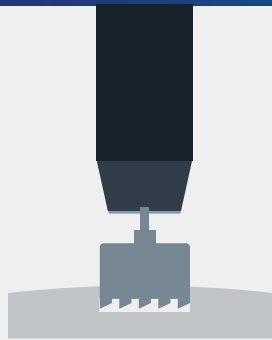


#### Hole location

- Centre hole on ridge if possible

### 2. SQUEEZE

Apply Sealant

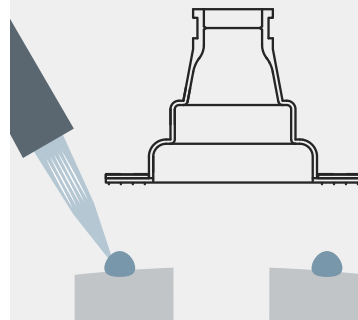


#### Sealant

- Select compatible sealant
- Apply sealant between roof and entry boot
- Ensure bead is continuous

### 3. FASTEN & SEAL

Screw or pop rivet and apply sealant

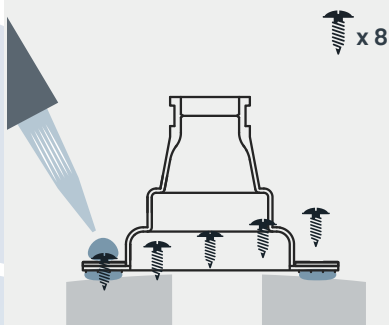


#### Fasteners & Sealant

- Use minimum 8 fasteners evenly spread
- Apply sealant over fastener heads to seal

### 4. INSERT & TIGHTEN

Insert conduit and tighten hose clamp

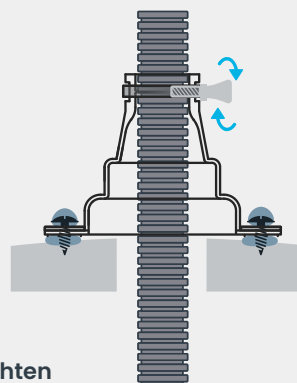

#### Tighten

- Insert conduit through entry boot and roof
- Tighten hose clamp to lock in place and seal