



INSTALL STEPS

1. PUSH CLIP ONTO FRAME

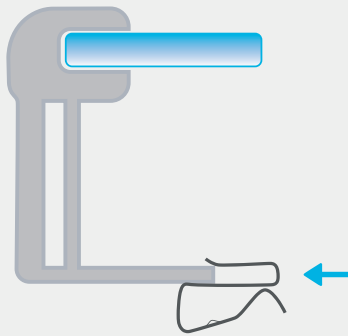

2. INSTALL CABLE TIE (if Applicable)

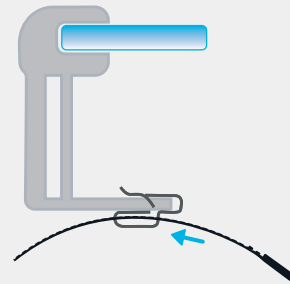

- No special tool required for CSE-LRG-SSTIE350-7
- Tie can be loose or tight depending on needs as it will lock into place however you wish to set it
- Bending or folding excess is easy if it suits the installation
- If cutting excess, using tin snips is far less effort than side cutters
- Prevent sharp edges for the next person and reduce risk of cable damage.

3. INSERT CABLES, ONE AT A TIME

